


Sometimes (particularly if you connect/disconnect screens while the eyeTrick computer is running) Windows will get in a mess with what screen is where.

The best way to reset this is to start the screen setup process from the beginning. It only takes five minutes. You can also use this process when setting up a new eyeTrick computer.

Before you start

Understand the physical ports that are used to connect the screens to the eyeTrick Computer

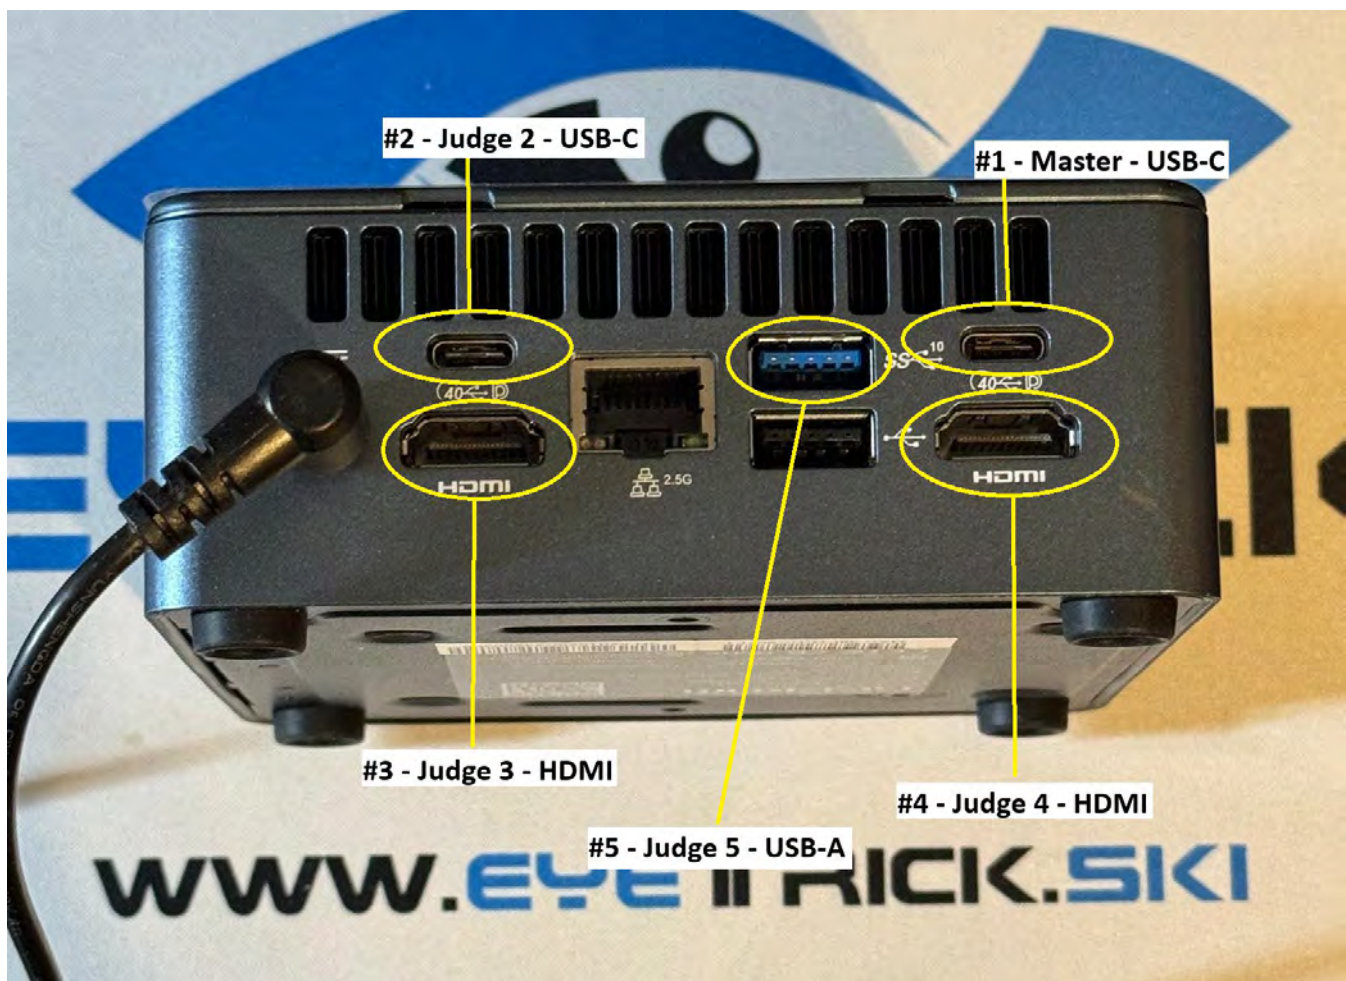

- The ports marked “USB-C” require the QGeem USB-C->HDMI adapter
- The ports marked “HDMI” the cable can be connected directly
- The port marker “USB-A” (only used with five judges) requires the Startech USB-A->HDMI adapter

Step 1

Shut down the computer and disconnect all the screen cables.

Connect ONLY the Master Judge screen using a QGeem USB-C Adapter to the #1 port (Top right of the computer as you look at it)




Start the computer normally.

Step 2

While the computer is running plug in the second screen (Judge 2) – also using a QGeem USB-C->HDMI adapter



Check in Display Settings (right click on desktop->Display Settings) that the screens are ordered from Left to Right. There is no need at this point to adjust the screen sizes.

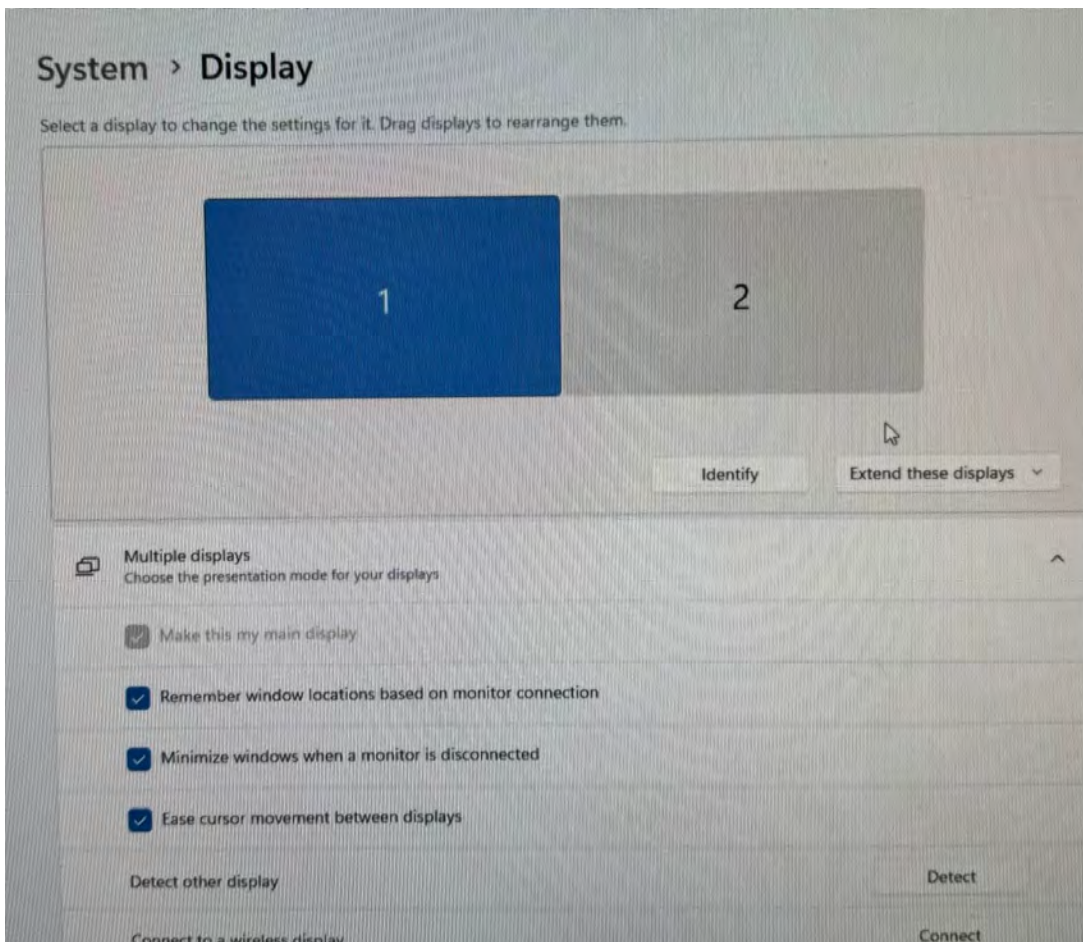


Step 3

While the computer is running plug in the third screen (Judge 3) – plugging the HDMI cable directly into the computer




Check in Display Settings that the screens are ordered from Left to Right.

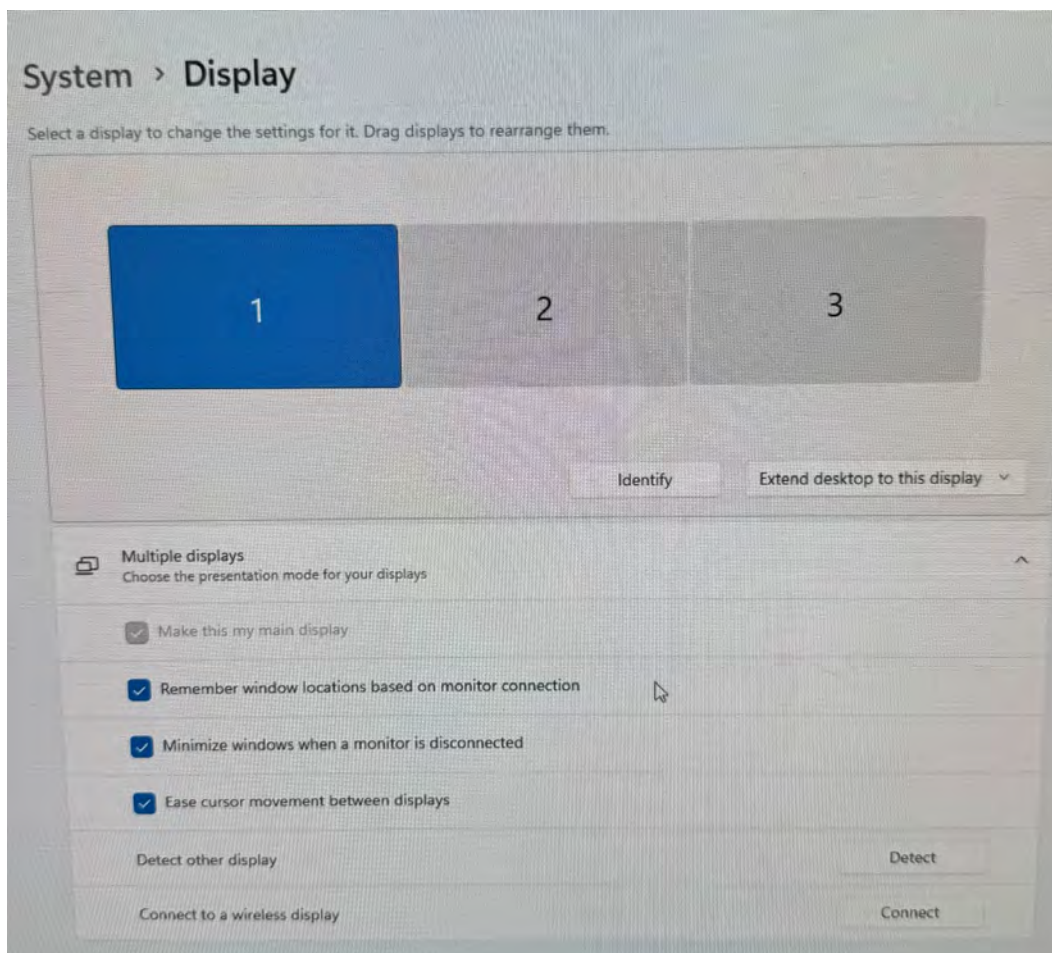

Adjust the screen resolutions:

- 1080p Mode
 - Screen 1: 2560 x 1440
 - Screen 2: 1920 x 1080
 - Screen 3: 1920 x 1080
- 720p Mode
 - Screen 1: 1920 x 1080
 - Screen 2: 1280 x 800
 - Screen 3: 1280 x 800

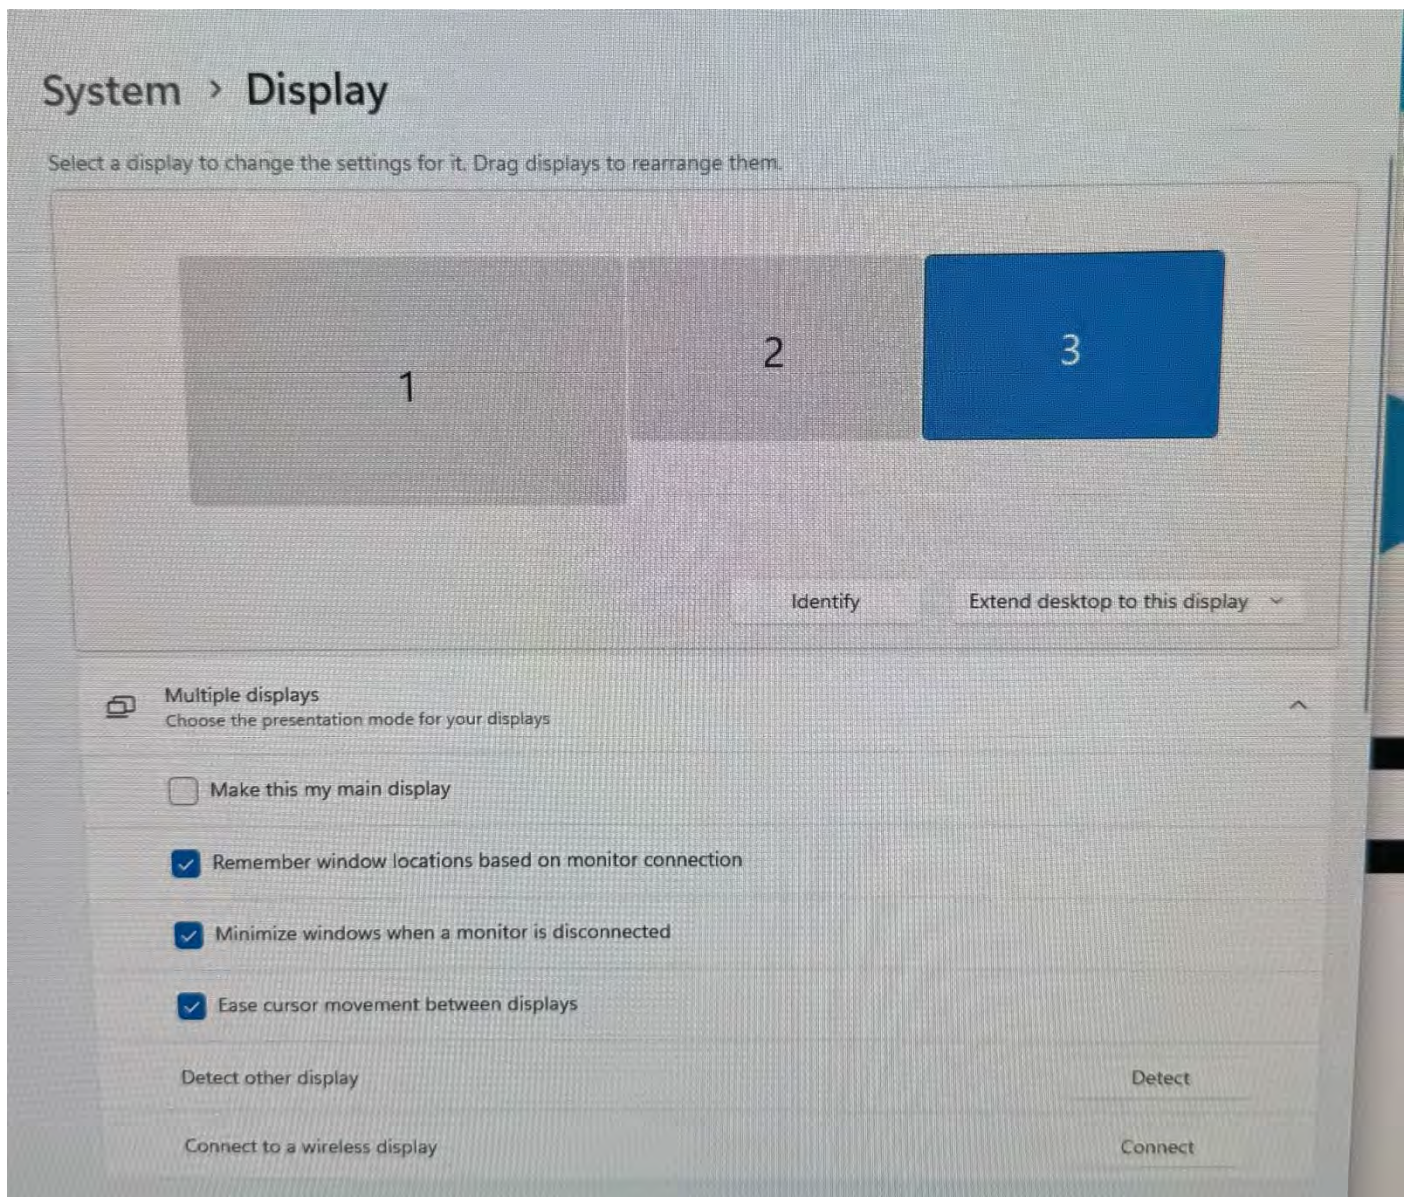

If you are using Three Judges then you are finished.

If you are using Five Judges then continue to Step 4

Step 4

While the computer is running plug in the fourth screen (Judge 4) – plugging the HDMI cable directly into the computer




Check in Display Settings that the screens are ordered from Left to Right.

Adjust the screen resolutions:

- 1080p Mode
 - Screen 1: 2560 x 1440
 - Screen 2: 1920 x 1080
 - Screen 3: 1920 x 1080
 - Screen 4: 1920 x 1080
- 720p Mode
 - Screen 1: 1920 x 1080
 - Screen 2: 1280 x 800
 - Screen 3: 1280 x 800
 - Screen 4: 1280 x 800

System > Display

Select a display to change the settings for it. Drag displays to rearrange them.

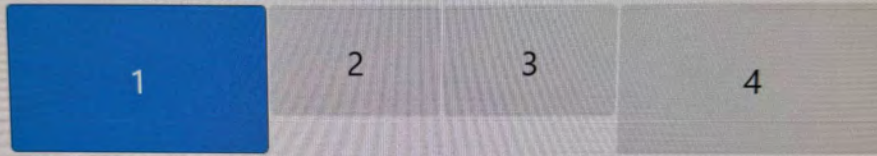

Identify

Extend desktop to this display ▾



Multiple displays

Choose the presentation mode for your displays

- Make this my main display
- Remember window locations based on monitor connection
- Minimize windows when a monitor is disconnected
- Ease cursor movement between displays

Detect other display


Detect

Connect to a wireless display

Connect

System > Display

Select a display to change the settings for it. Drag displays to rearrange them.

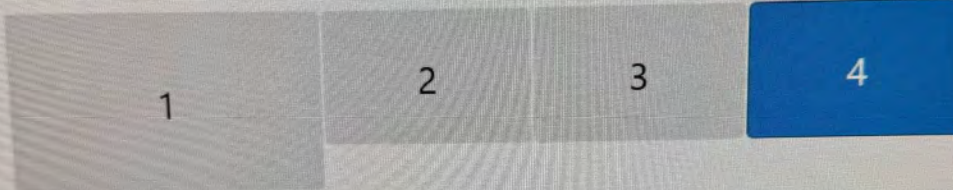

Identify

Extend desktop to this display ▾



Multiple displays

Choose the presentation mode for your displays

- Make this my main display
- Remember window locations based on monitor connection
- Minimize windows when a monitor is disconnected
- Ease cursor movement between displays

Detect other display

Detect

Connect to a wireless display

Connect

Step 5

While the computer is running plug in the last screen (Judge 5) – plugging the Startech USB-A adapter into the upper of the two USB ports




Check in Display Settings that the screens are ordered from Left to Right.

Adjust the screen resolutions:

- 1080p Mode
 - Screen 1: 2560 x 1440
 - Screen 2: 1920 x 1080
 - Screen 3: 1920 x 1080
 - Screen 4: 1920 x 1080
 - Screen 5: 1920 x 1080
- 720p Mode
 - Screen 1: 1920 x 1080
 - Screen 2: 1280 x 800
 - Screen 3: 1280 x 800
 - Screen 4: 1280 x 800
 - Screen 5: 1280 x 800 (sometimes only 1280 x 720 is available. This is okay)

System > Display

Select a display to change the settings for it. Drag displays to rearrange them.

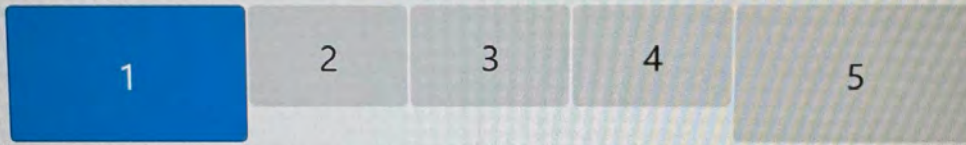

Identify

Extend desktop to this display ▾



Multiple displays

Choose the presentation mode for your displays

- Make this my main display
- Remember window locations based on monitor connection
- Minimize windows when a monitor is disconnected
- Ease cursor movement between displays

Detect other display


Detect

Connect to a wireless display

Connect

System > Display

Select a display to change the settings for it. Drag displays to rearrange them.

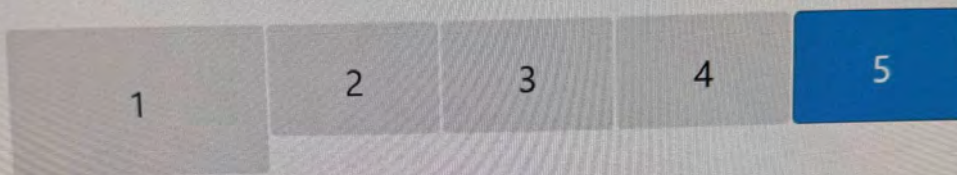

Identify

Extend desktop to this display ▾



Multiple displays

Choose the presentation mode for your displays

- Make this my main display
- Remember window locations based on monitor connection
- Minimize windows when a monitor is disconnected
- Ease cursor movement between displays

Detect other display

Detect

Connect to a wireless display

Connect